



11636 GOLDRING RD • ARCADIA, CALIFORNIA 91006-5815
626-358-2559 • FAX 626-359-5701 • 800-525-6925

Instructions for TBR-11E-5S Telephone Beep Inserter Inline, Phone Powered

The TBR-11E inserts a beep every 5 seconds on your phone call. The beep is heard by everyone on the call. The unit is powered by the phone, so no separate power supply is needed.

The unit plugs in between the coil cord and the phone base, and will insert a beep on the call whenever the handset is Off-Hook.

INSTALLATION (See Diagram)

- 1 Plug the modular plug on the cord of the TBR-11E-5S into the headset jack on the telephone base.
- 2 Adjust the beep volume if necessary with the Beep Volume Pot as shown.
- 3 The unit is intended to be left free between the coil cord and the phone base. Alternately, it may be mounted with an adhesive pad to a convenient location on the phone or desk.

